
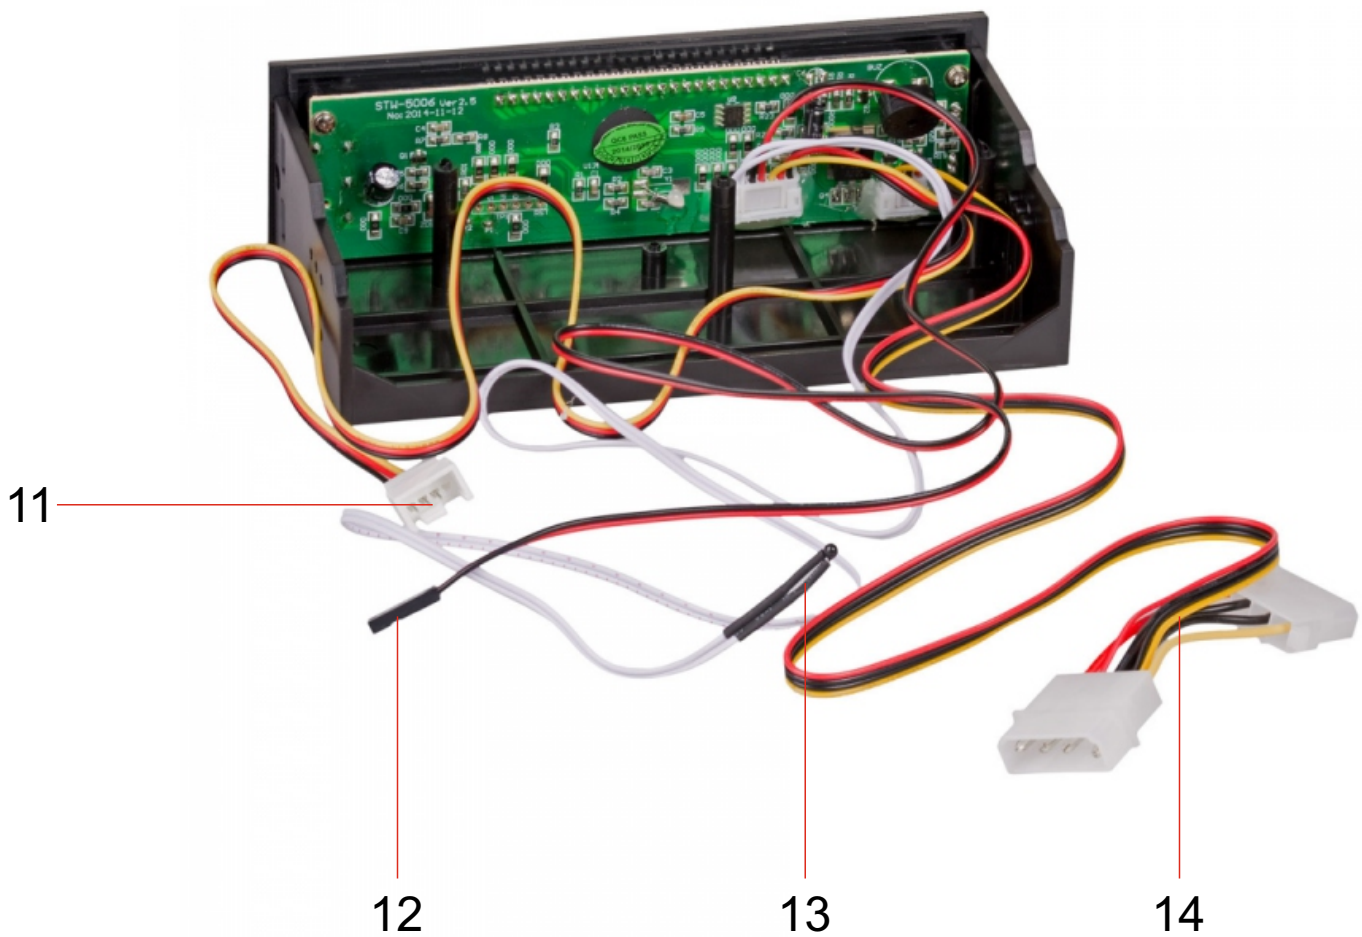


# User manual

## Akyga AK-CA-25

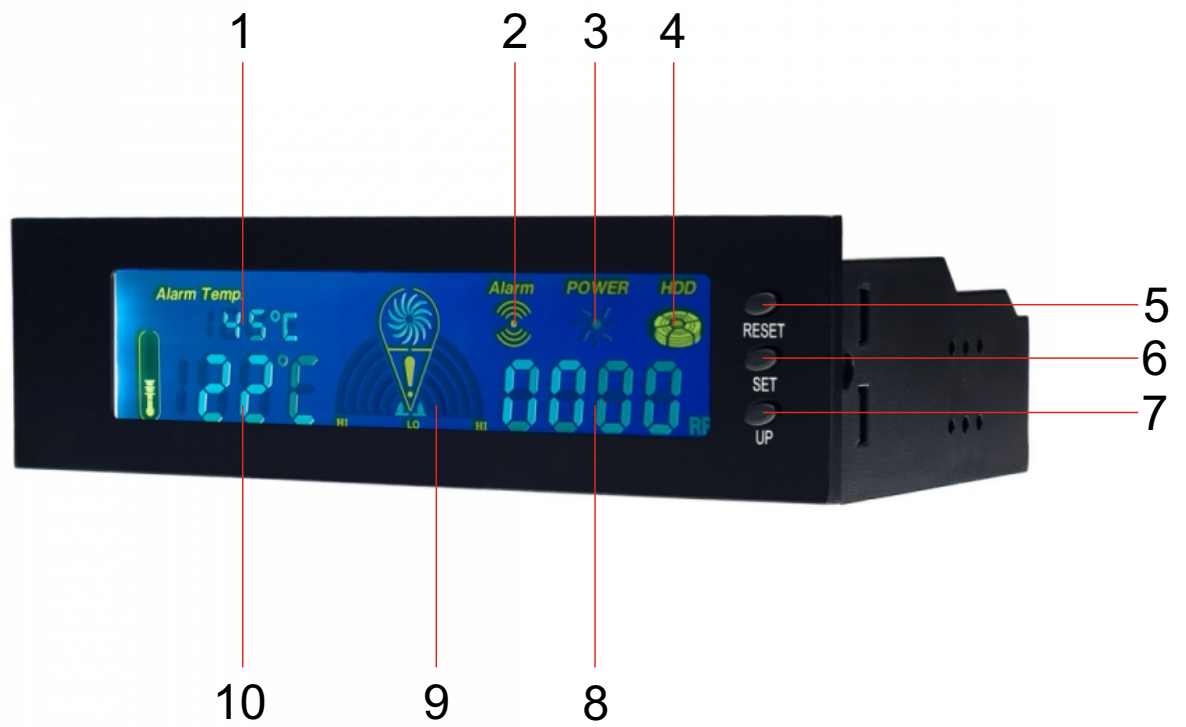

# User manual

## Akyga AK-CA-25

### 1. Alarm temperature indicator

The alarm temperature is set via the SET key (6). After exceeding this temperature, the module will automatically increase the fan speed.

### 2. Alarm indicator

The indicator will light up when the alarm temperature is exceeded and will go off after cool down.

### 3. Fan power indicator

Lights up when the fan is running

### 4. HDD / SSD disk activity indicator

Shows the activity of a hard disk drive

### 5. RESET button

Resets the alarm temperature and fan power to the basic settings.

### 6. SET button

Gradually increases the alarm temperature.

### 7. UP button

Gradually increases the fan power.

### 8. Fan speed indicator

Indicates the current fan speed (a fan with a 3-pin plug is required for proper operation).

### 9. Fan power indicator

Indicates the current fan power (gradually every 20%).

### 10. Temperature indicator

Indicates actual temperature.

### 11. 3-pin fan power connector

For fan power supply (necessary for proper operation)

### 12. Goldpin HDD / SSD plug

Optional (needed only for proper operation HDD / SSD disk activity indicator (4) )

### 13. Thermometer sensor

Place close to a place that is exposed to overheating (necessary for proper operation)

### 14. MOLEX connector

Power the LCD panel and fan (necessary for proper operation)

NOTE: Panel during anomalies (eg no fan speed readout (8) or alarm temperature occurrence is beeping